

# MADISON PARK® ASSEMBLY INSTRUCTIONS

Description: Audrey Dining Chair

 


## Important safety instructions:

- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.






## Pre-assembly:

- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

## Parts List

Item	Description	QTY
P1	Chair Back 	1
P2	Seat Cushion 	1
P3	Front Legs 	2

## Hardware List

Item	Description	QTY
H1	Short Bolts Ø5/16" x 2-1/4" 	5
H2	Long Bolts Ø5/16" x 3-1/2" 	4
H3	Lock Washers Ø5/16" 	9
H4	Flat Washers Ø5/16" 	9
H5	Allen Wrench 5/16" 	1
H6	Wooden Dowel Ø10 x 30mm 	2

## DISCLAIMER:

WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.

## Assembly Procedures:

Step 1: Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach the seat cushion (P2) to the chair back (P1) as shown.

Step 2: Attach the front legs (P3) to the seat cushion (P2) as shown.

- (H1)x5 Short Bolts Ø5/16"x2-1/4" 
- (H2)x4 Long Bolts Ø5/16"x3-1/2" 
- (H3)x9 Lock Washers Ø5/16" 
- (H4)x9 Flat Washers Ø5/16" 
- (H5)x1 Allen Wrench 5/16" 
- (H6)x2 Wooden Dowel Ø10 x 30mm 

Step 3. Securely tighten all bolts, turn the assembled chair to an upright position. Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

**ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO ENSURE THAT ALL HARDWARE IS KEPT TIGHTENED.**

Thank you for your purchase

