


 

Important safety instructions:


- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:





- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

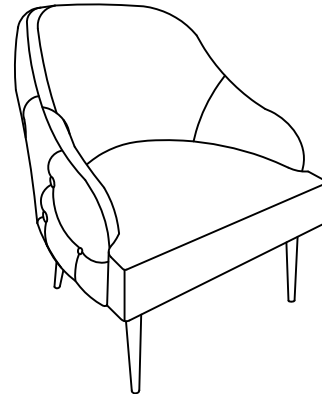Parts List

Item	Description	QTY
P1	Chair Top 	1
P2	Front Legs  (P2)	2
P3	Back Legs  (P3)	2



Hardware List





Item	Description	QTY
H1	Bolts Ø1/4"×3/4" 	14
H2	Lock Washers Ø1/4" 	14
H3	Flat Washers Ø1/4"×19mm 	14
H4	Allen Wrench 1/4" 	1


DISCLAIMER:

WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.


Assembly Procedures:

Step 1: Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach the front legs (P2) and back legs (P3) to the chair top (P1) as shown below.

- (H1)x14 Bolts Ø1/4"×3/4" 
- (H2)x14 Lock Washers Ø1/4" 
- (H3)x14 Flat Washers Ø1/4"×19mm 
- (H4)x1 Allen Wrench 1/4" 

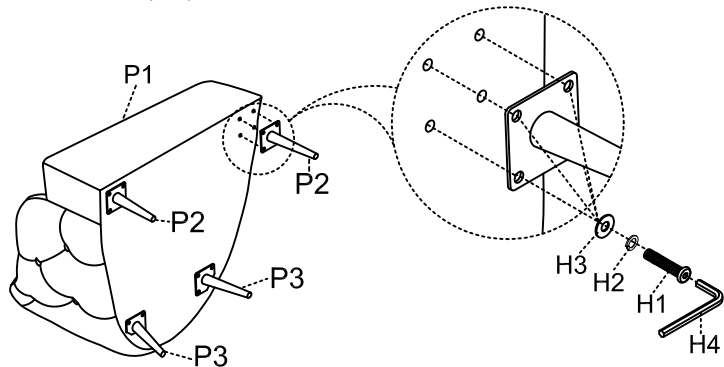

Step 2. Securely tighten all bolts, turn the assembled chair to an upright position. Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

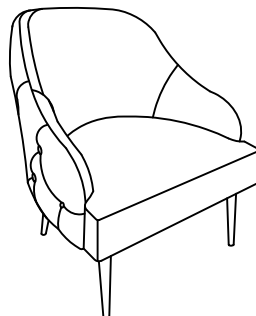

ADDITIONAL NOTE ABOUT SAFETY:

BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE.

THEY SHOULD BE INSPECTED AT LEAST EVERY 3 MONTHS AND RE-TIGHTENED AS NEEDED TO PREVENT DAMAGE OR INJURY, AND ENSURE STABILITY.

Thank you for your purchase