



Repair Beckett Headboard and Footboard

Step 1: Remove 3 broken screws.

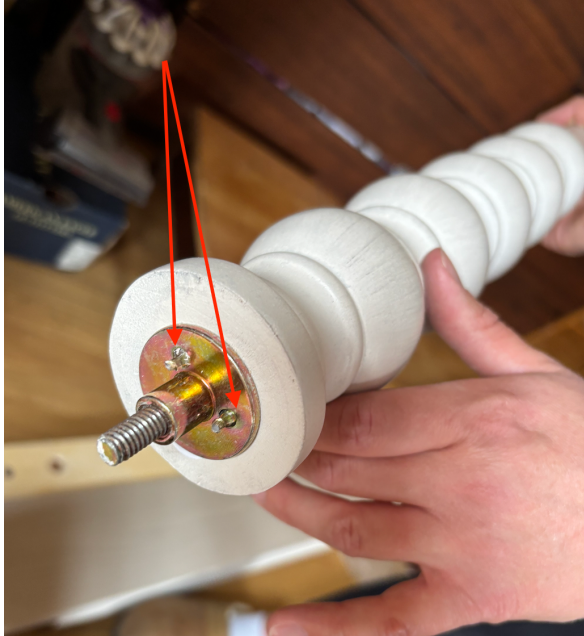

Step 2: Remove the locking pliers from the post. (Disassembly video attached.)

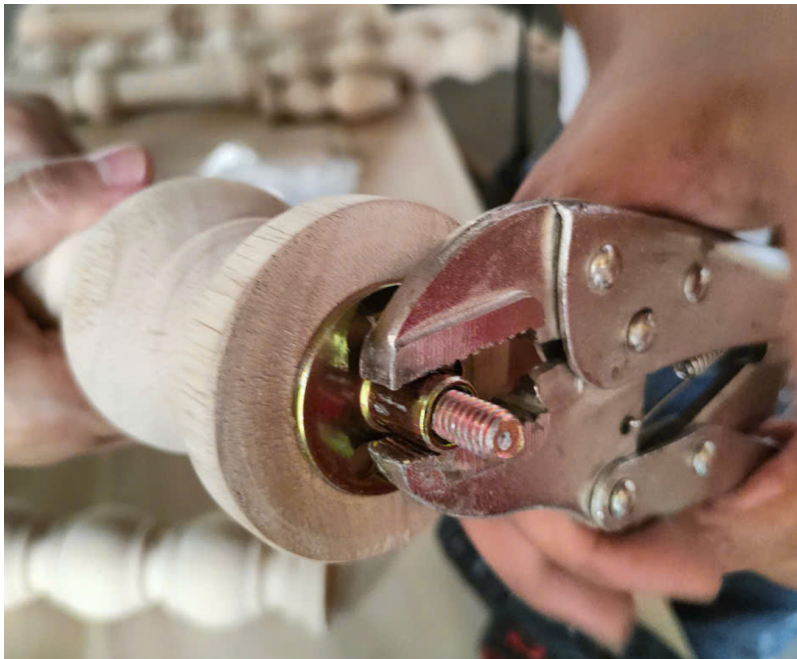

Step 3: There are the existing 3 pre-drilled holes at this area from picture, place a round metal plate as shown in the picture and find new screw positions that avoid the old drill holes.



Step 4: Install 3 new screws (screw size: dia 8mm, L:32mm x W:3.2mm)

